



Personal Protective Equipment (PPE)

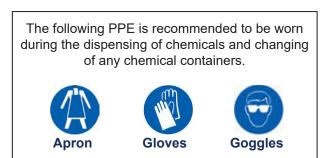

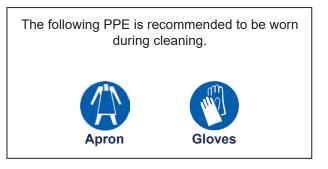

Clean Pro+ Product	Dosing	Application
* Kitchen Cleaner	60 – 120 ml per 5 litres of water 30 – 60 ml per trigger spray	
* Detergent Disinfectant	30 ml per trigger spray	
Fast Acting Antibacterial Cleaner & Disinfectant	Ready to use	

Cleaning Method

- 1 Run the dishwasher empty cycle. Remove any filters, traps and wash arms as necessary.
- 2 Clean traps, filters and wash arms by soaking and scrubbing in Kitchen Cleaner.
- Spray dishwasher inside and out with Kitchen Cleaner solution paying particular attention to the edges and corners where soiling tends to accumulate.
- Wipe with cloth and scrub as necessary.
- **6** Replace traps, filters and wash arms.
- Spray all cleaned surfaces with a fine mist of Detergent Disinfectant or Fast Acting Antibacterial Cleaner & Disinfectant solution.
- Allow the surfaces to air dry for the minimum time indicated on the label.

* These products are also available as a 1 litre concentrate and a 1 litre ready to use.