

## **Personal Protective Equipment (PPE)**

The following PPE is recommended to be worn during the dispensing of chemicals and changing of any chemical containers.







The following PPE is recommended to be worn during cleaning.






## **Important**

If item needs to be cleaned during the day on an "as required" basis, please refer to the Cleaning Method Guidance, 1 Stage Cleaning document.

Clean Pro+ Product	
* Kitchen Cleaner	251945 CleanPro+ KTOREN LEST
Concentrated Washing Up	240235 ★ CleanPro+
Liquid with Antibacterial Agent	CONCONTENTED WASHING UP LIQUID such decision and depart?
* Detergent Disinfectant	ST 1904 CICARDPTO CICARDPT
Fast Acting Antibacterial Cleaner & Disinfectant	Commence of the commence of th

Dosing	
30 - 60 ml per trigger spray 60 – 120 ml per 5 litres of water	
20 – 40 ml per 10 litres of water	
30 ml per trigger spray	
Ready to use	

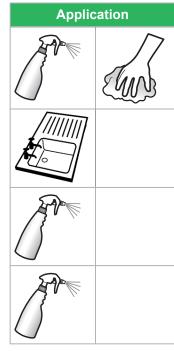

## **Cleaning Method**

- Remove any food or food products from immediate area to be cleaned.
- Isolate from electrical supply and allow to cool before cleaning.
- 3 Drain water from Bain Marie.
- Wash the bowls in a sink containing a warm solution of Kitchen Cleaner or Washing Up Liquid.
- Spray both inside and out of Bain Marie with Kitchen Cleaner solution allowing some contact time dependent on degree of soiling.
- Wipe with cloth and scrub as necessary.
- Spray all cleaned surfaces with a fine mist of Detergent Disinfectant or Fast Acting Antibacterial Cleaner & Disinfectant solution.
- 8 Allow the disinfectant to remain in contact with the surfaces for the minimum contact time indicated on the label. The Bain Marie bowls should be rinsed with clean water and dried before food contact.

\* These products are also available as a 1 litre concentrate and a 1 litre ready to use.

Booker 2020

www.booker.co.uk

19 Bain Marie 20 - 99554 CleanPro.indd 1 20/07/2020 09:04